



Table of Contents

	Preface	xv
	Purpose of This Document	xv
	Intended Audience	xv
	Document Organization	xv
	Conventions	xvi
	Related Information	xvi
Chapter 1	TALnet Product Overview	1-1
	1.1 TALtalk Protocol	1-1
	1.2 Standard Network Protocols	1-2
	1.3 Standard Application Support	1-2
	1.4 Configuring the TALnet Software	1-2
Chapter 2	Planning Your Router Configuration	2-1
	2.1 Determining Network Parameters	2-1
	2.1.1 Global Parameters	2-1
	Hostname	2-1
	IP Address	2-2
	SNMP Variables	2-2
	2.1.2 Radio Parameters	2-2
	2.1.3 Ethernet Interface Parameters	2-5
	IP Address Overview	2-5
	Subnetting Overview	2-6
	Determining Your Address Scheme	2-7
	2.1.4 Domain Name System (DNS)	2-8
	2.1.5 Routing Information	2-10
	Static and Dynamic Routing	2-10
	Routing Information Protocol (RIP)	2-10
	Additional Routing Parameters	2-11
	2.1.6 User Authorization	2-12
	2.2 Configuration Worksheet	2-12

Chapter 3	Configuring the TALnet Software	3-1
3.1	Sample Configuration File	3-1
3.2	Configuration Overview	3-4
3.3	Opening the Configuration File	3-4
3.3.1	Opening the File from the Console	3-5
3.3.2	Opening the File from a Remote System	3-6
3.4	Specifying Global Parameters	3-7
3.4.1	Defining a Hostname	3-7
3.4.2	Specifying the IP Address	3-7
3.4.3	Identifying the System Contact	3-7
3.4.4	Identifying the System Location	3-8
3.5	Configuring Radio Parameters	3-8
3.5.1	Configuring the Wireless Interface	3-8
3.5.2	Configuring the Channel	3-9
3.5.3	Modifying the Power on a Per-Link Basis	3-10
3.5.4	Radio Configuration Examples	3-10
3.6	Configuring Your Ethernet Connection	3-11
3.6.1	Configuring the Device	3-11
3.6.2	Configuring the Interface	3-11
3.6.3	Ethernet Configuration Example	3-12
3.7	Defining the Location of the DNS Server	3-12
3.8	Setting Up Routing	3-13
3.8.1	Creating a Static Routing Table	3-14
3.8.2	Adding a Default Route to a Routing Table	3-14
3.8.3	Identifying Associated Networks	3-14
3.8.4	Enabling Automatic Neighbor Updates	3-15
3.8.5	Enabling or Disabling RIP	3-15
3.9	Defining User Authorization	3-15
3.10	Establishing IP Packet Filters	3-16
3.10.1	Filtering Packets Based on Packet Type	3-17
3.10.2	Filtering Packets Based on Source or Destination Addresses	3-17
3.10.3	Packet-Filtering Examples	3-18
3.11	Modifying the ARP Cache	3-18
3.12	Configuring Support for PPP Connections	3-19
3.12.1	Overview of PPP	3-20
3.12.2	Configuring Support for Remote PPP Connections	3-20
3.12.3	Configuring Support for Direct PPP Connections	3-22
3.12.4	PPP Configuration Example	3-24
3.13	Reloading the Configuration File	3-24
3.13.1	Reloading the File from the Console	3-24
3.13.2	Reloading the File from a Remote System	3-25

Chapter 4	Monitoring and Maintaining Your Network	4-1
4.1	TALnet Monitoring Commands	4-1
4.1.1	Displaying Statistics	4-1
4.1.2	Testing Connectivity of a System	4-4
4.1.3	Testing the Route a Datagram Travels	4-4
4.1.4	Analyzing the RSS of Neighboring Routers	4-5
4.2	SNMP	4-6
4.2.1	Overview of SNMP	4-6
4.2.2	Supported MIBs	4-7
4.2.3	Configuring Your Router to Support SNMP	4-8
4.2.4	Sending SNMP Requests	4-8
Appendix A	TALnet Command Reference	A-1
A.1	ABORT	A-2
A.2	ARP	A-4
A.3	CD	A-7
A.4	CLOSE	A-8
A.5	COPY	A-9
A.6	DELETE	A-10
A.7	DEVICE	A-11
A.8	DIR	A-18
A.9	DOMAIN	A-19
A.10	ECHO	A-23
A.11	EXIT	A-24
A.12	FTP	A-25
A.13	HELP	A-31
A.14	HOP	A-32
A.15	HOSTNAME	A-34
A.16	ICMP	A-36
A.17	IFACE	A-38
A.18	IP	A-45
A.19	KICK	A-48
A.20	LOG	A-50
A.21	LOGOUT	A-52
A.22	MEMORY	A-53
A.23	MKDIR	A-55
A.24	PING	A-56
A.25	PROCESS	A-59
A.26	PWD	A-62

A.27	REBOOT	A-63
A.28	RENAME	A-65
A.29	REPEAT	A-66
A.30	RESET	A-67
A.31	RIP	A-68
A.32	RMDIR	A-71
A.33	ROUTE	A-72
A.34	SESSION	A-74
A.35	SNMP	A-76
A.36	START	A-79
A.37	STOP	A-81
A.38	TALK DEBUG	A-83
A.39	TALK RADIO	A-84
A.40	TALK SHOW	A-92
A.41	TALK TUNE	A-95
A.42	TCP	A-96
A.43	TELNET	A-101
A.44	TIME	A-102
A.45	TIP	A-103
A.46	TRACE	A-105
A.47	UDP	A-108
A.48	UPTIME	A-109
A.49	USER	A-110
A.50	VERSION	A-113
A.51	VIEW	A-114
A.52	WHO	A-115

Appendix B TAL Proprietary Management Information Base (MIB) B-1

B.1	General Definitions	B-1
B.2	TAL Products	B-2
B.3	TAL Local Variables	B-2
B.4	TALtalk Radio Table	B-2
B.5	TALtalk Neighbor Table	B-5
B.6	TALtalk Channel Table	B-9

Appendix C	Using Xvi	C-1
	C.1 Introduction to Xvi	C-1
	C.2 Opening a File	C-2
	C.3 Notes about Command Mode	C-2
	C.4 Moving the Cursor	C-2
	C.5 Modifying the File	C-3
	C.6 Saving and Exiting the File	C-3
Appendix D	Glossary	D-1
	Index	

